

Technical Reference - Q&A

1.Q: When I want to install an add-on AGP graphics card, do I need to adjust any settings in the BIOS if my motherboard has Onboard VGA?

A: No! You do not need to adjust any settings in the BIOS. ASRock motherboard will switch between add-on AGP and Onboard VGA automatically when you install or uninstall it.

2. Q: How can I set CPU FSB (Front Side Bus) correctly?

A: For Intel CPU: You do not need to do any setting. When you install CPU at the first time, all that you need to do is go to BIOS and “Load setup defaults”, then the system will auto detect the correct CPU FSB.

For K7VT2 and K7VM2: There is a FSB_SEL jumper on the motherboard .

FSB 100Mhz set [2-3](#)

FSB 133Mhz set [1-2](#)

3. Q: Should I clear the CMOS after I upgrade the BIOS?

A: If your system is running fine, you do not have to clear the CMOS. Also please do not clear the CMOS right after you upgrade the BIOS. After upgrading the BIOS, please reboot your system once then you can clear the CMOS if you need to do it.

4.Q: Where can I find Linux driver for K7VM2 and K7VT2?

A: Please refer to VIA website <http://www.viaarena.com/?PageID=60> for Linux drivers and support.